 


# SUPERIOR

WASHER & GASKET CORP.

 
Part Number	Material	OD	ID	Free HT	Size	Thickness	
CB02-375025	=Spring-Steel	.373/.377	.091/.095	.058/.06		.025	Belleville
CB02-250015	=Spring-Steel	.245/.255	.092/.097	.026/.03		.015	Belleville
CB02-182006	=Spring-Steel	.177/.187	.093/.103	.013		.006	Belleville
CB02-182010	=Spring-Steel	.177/.187	.093/.103	.015		.010	Belleville
CB03-302012	=Spring-Steel	.300/.305	.109/.112	.050/.06		.012	Belleville
CB04-242031	=Spring-Steel	.242	.122	.047		.031	Belleville
CB04-245009	=Spring-Steel	.240/.250	.125/.135	.017		.009	Belleville
CB04-245013	=Spring-Steel	.240/.250	.125/.135	.020		.013	Belleville
CB04-370018	=Spring-Steel	.365/.375	.125/.135	.029		.018	Belleville
CB04-245008	=Spring-Steel	.245	.129	.021		.008	Belleville
CB04-300013	=Spring-Steel	.295/.305	.129/.136	.036/.05		.013	Belleville
CB04-246007	=Spring-Steel	.246	.132	.020		.007	Belleville
CB04-250020	=Spring-Steel	.250	.132	.045		.020	Belleville
CB06-375025	=Spring-Steel	.365/.385	.138/.143	.055/.07		.025	Belleville
CB06-278015	=Spring-Steel	.278	.139	.029		.015	Belleville
CB06-277020	=Spring-Steel	.277	.142	.037		.020	Belleville
CB06-277014	=Spring-Steel	.277	.144	.024		.014	Belleville
CB06-278012	=Spring-Steel	.278	.144	.033		.010	Belleville
CB06-300012	=Spring-Steel	.300	.145	.053		.012	Belleville
CB06-320025	=Spring-Steel	.320	.147	.049		.025	Belleville
CB06-312015	=Spring-Steel	.312	.155	.026		.015	Belleville
CB06-307010	=Spring-Steel	.302/.312	.156/.166	.021		.010	Belleville
CB06-307016	=Spring-Steel	.302/.312	.156/.166	.025		.016	Belleville
CB06-313016	=Spring-Steel	.313	.157	.028		.016	Belleville
CB06-308010	=Spring-Steel	.308	.160	.024		.010	Belleville
CB06-308023	=Spring-Steel	.308	.160	.035		.023	Belleville
CB08-437031	=Spring-Steel	.433/.443	.164/.170	.062/.07		.031	Belleville
CB08-341017	=Spring-Steel	.341	.165	.033		.017	Belleville
CB08-100064	=Spring-Steel	1.000	.166	.220		.064	Belleville
CB06-406018	=Spring-Steel	.396/.416	.170/.180	.040/.06		.018	Belleville

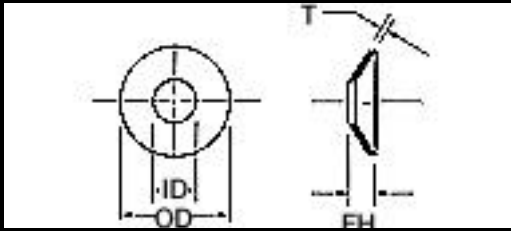

# SUPERIOR

WASHER & GASKET CORP.


Part Number	Material	OD	ID	Free HT	Size	Thickness	
CB08-339018	=Spring-Steel	.339	.171	.035		.018	Belleville
CB08-348040	=Spring-Steel	.348	.174	.095		.040	Belleville
CB08-438040	=Spring-Steel	.438	.174	.056		.042	Belleville
CB08-500030	=Spring-Steel	.500	.180	.058		.030	Belleville
CB08-510030	=Spring-Steel	.511	.180	.048		.028	Belleville
CB10-132032	=Spring-Steel	1.321	.190	.046		.032	Belleville
CB10-562040	=Spring-Steel	.552/.572	.190/.195	.070/.09		.040	Belleville
CB10-370015	=Spring-Steel	.365/.375	.190/.200	.027		.015	Belleville
CB10-370018	=Spring-Steel	.365/.375	.190/.200	.028		.018	Belleville
CB10-370020	=Spring-Steel	.365/.375	.190/.200	.030		.020	Belleville
CB10-557028	=Spring-Steel	.552/.562	.190/.200	.042		.028	Belleville
CB10-313015	=Spring-Steel	.313	.192	.031		.015	Belleville
CB10-366008	=Spring-Steel	.366	.192	.028		.008	Belleville
CB10-373013	=Spring-Steel	.373	.194	.030		.013	Belleville
CB10-373019	=Spring-Steel	.373	.194	.030		.019	Belleville
CB10-374015	=Spring-Steel	.374	.195	.030		.015	Belleville
CB10-480015	=Spring-Steel	.480	.195	.036		.015	Belleville
CB10-559030	=Spring-Steel	.559	.196	.045		.030	Belleville
CB10-373020	=Spring-Steel	.373	.198	.034		.020	Belleville
CB10-371015	=Spring-Steel	.371	.202	.027		.015	Belleville
CB10-439018	=Spring-Steel	.439	.202	.035		.018	Belleville
CB10-560027	=Spring-Steel	.560	.202	.040		.027	Belleville
CB10-421029	=Spring-Steel	.421	.205	.070		.029	Belleville
CB10-503008	=Spring-Steel	.503	.206	.095		.008	Belleville
CB10-426034	=Spring-Steel	.426	.207	.055		.034	Belleville
CB10-428031	=Spring-Steel	.428	.208	.068		.031	Belleville
CB10-596017	=Spring-Steel	.596	.208	.075		.017	Belleville
CB10-424040	=Spring-Steel	.424	.215	.058		.040	Belleville
CB10-500026	=Spring-Steel	.500	.222	.042		.026	Belleville
CB14-750025	=Spring-Steel	.740/.760	.250/.255	.035/.04		.025	Belleville

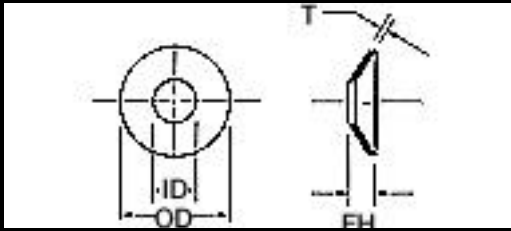

# SUPERIOR

WASHER & GASKET CORP.

 
Part Number	Material	OD	ID	Free HT	Size	Thickness	
CB14-750062	=Spring-Steel	.740/.760	.250/.255	.090/.11		.062	Belleville
CB14-437020	=Spring-Steel	.437	.253	.050		.020	Belleville
CB14-494020	=Spring-Steel	.495	.253	.034		.020	Belleville
CB14-751040	=Spring-Steel	.751	.253	.066		.040	Belleville
CB14-437016	=Spring-Steel	.432/.442	.253/.260	.040/.05		.016	Belleville
CB14-495018	=Spring-Steel	.490/.500	.255/.265	.034		.018	Belleville
CB14-495022	=Spring-Steel	.490/.500	.255/.265	.036		.022	Belleville
CB14-495025	=Spring-Steel	.490/.500	.255/.265	.038		.025	Belleville
CB14-495038	=Spring-Steel	.495/.500	.255/.265	.047		.038	Belleville
CB14-745036	=Spring-Steel	.740/.750	.255/.265	.054		.036	Belleville
CB14-562015	=Spring-Steel	.552/.572	.256/.267	.031/.04		.015	Belleville
CB14-496018	=Spring-Steel	.496	.257	.038		.018	Belleville
CB14-498060	=Spring-Steel	.498	.257	.085		.060	Belleville
CB14-498026	=Spring-Steel	.498	.258	.058		.026	Belleville
CB14-750016	=Spring-Steel	.750	.258	.054		.016	Belleville
CB14-437040	=Spring-Steel	.437	.260	.054		.040	Belleville
CB14-483020	=Spring-Steel	.483	.260	.034		.020	Belleville
CB14-498024	=Spring-Steel	.498	.260	.040		.024	Belleville
CB14-499061	=Spring-Steel	.499	.260	.075		.061	Belleville
CB14-740040	=Spring-Steel	.730/.745	.260/.270	.080/.10		.040	Belleville
CB14-501015	=Spring-Steel	.501	.261	.041		.015	Belleville
CB14-501022	=Spring-Steel	.501	.261	.040		.022	Belleville
CB14-449015	=Spring-Steel	.449	.265	.024		.015	Belleville
CB14-505005	=Spring-Steel	.565	.265	.038		.025	Belleville
CB14-490020	=Spring-Steel	.490	.273	.035		.020	Belleville
CB14-500016	=Spring-Steel	.500	.273	.044		.016	Belleville
CB14-952076	=Spring-Steel	.952	.273	.100		.076	Belleville
CB16-500050	=Spring-Steel	.490/.510	.281/.286	.080/.09		.050	Belleville
CB16-750075	=Spring-Steel	.750	.282	.099		.075	Belleville
CB16-493048	=Spring-Steel	.493	.314	.078		.048	Belleville

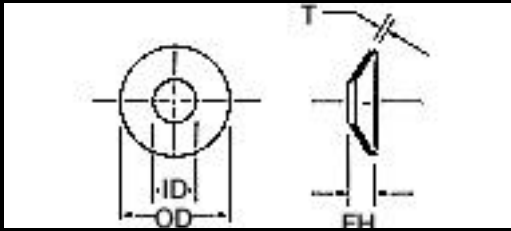

# SUPERIOR

WASHER & GASKET CORP.

 
Part Number	Material	OD	ID	Free HT	Size	Thickness	
CB16-600031	=Spring-Steel	.600	.316	.043		.031	Belleville
CB16-628058	=Spring-Steel	.628	.316	.082		.058	Belleville
CB18-620022	=Spring-Steel	.615/.625	.317/.327	.042		.022	Belleville
CB18-620032	=Spring-Steel	.615/.625	.317/.327	.048		.032	Belleville
CB18-932045	=Spring-Steel	.927/.937	.317/.327	.067		.045	Belleville
CB18-625032	=Spring-Steel	.625	.320	.050		.032	Belleville
CB18-625030	=Spring-Steel	.625	.320	.062		.031	Belleville
CB18-493050	=Spring-Steel	.493	.322	.073		.050	Belleville
CB18-500010	=Spring-Steel	.500	.323	.020		.010	Belleville
CB18-609013	=Spring-Steel	.609	.324	.071		.013	Belleville
CB18-620030	=Spring-Steel	.620	.324	.047		.030	Belleville
CB18-620050	=Spring-Steel	.620	.324	.067		.050	Belleville
CB18-719028	=Spring-Steel	.719	.324	.050		.028	Belleville
CB18-812075	=Spring-Steel	.812	.324	.106		.075	Belleville
CB18-624056	=Spring-Steel	.624	.340	.017		.056	Belleville
CB18-625009	=Spring-Steel	.625	.376	.034		.009	Belleville
CB20-755050	=Spring-Steel	.755	.380	.064		.050	Belleville
CB20-745028	=Spring-Steel	.740/.750	.380/.390	.051		.028	Belleville
CB20-745034	=Spring-Steel	.740/.750	.380/.390	.055		.034	Belleville
CB20-745040	=Spring-Steel	.740/.750	.380/.390	.059		.040	Belleville
CB20-745056	=Spring-Steel	.740/.750	.380/.390	.070		.056	Belleville
CB20-112053	=Spring-Steel	1.115/1.125	.380/.390	.080		.053	Belleville
CB20-746040	=Spring-Steel	.746	.381	.067		.040	Belleville
CB20-749033	=Spring-Steel	.749	.383	.052		.033	Belleville
CB20-125065	=Spring-Steel	1.240/1.260	.384/.398	.110/.12		.065	Belleville
CB20-746034	=Spring-Steel	.746	.385	.062		.034	Belleville
CB20-748041	=Spring-Steel	.748	.386	.068		.041	Belleville
CB20-746042	=Spring-Steel	.746	.389	.060		.042	Belleville
CB20-100063	=Spring-Steel	1.002	.389	.120		.063	Belleville
CB20-822022	=Spring-Steel	.822	.395	.127		.022	Belleville

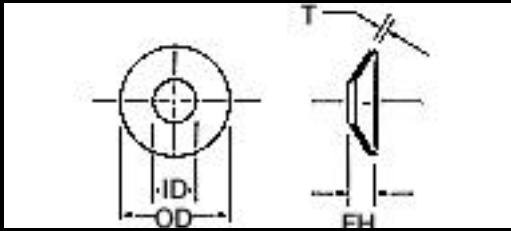

# SUPERIOR

WASHER & GASKET CORP.

 
Part Number	Material	OD	ID	Free HT	Size	Thickness	
CB20-126062	=Spring-Steel	1.250	.395	.121		.062	Belleville
CB20-120035	=Spring-Steel	1.195/1.205	.395/.400	.093		.035	Belleville
CB20-111078	=Spring-Steel	1.118	.396	.140		.078	Belleville
CB20-109045	=Spring-Steel	1.083/1.103	.396/.406	.131/.14		.045	Belleville
CB20-109041	=Spring-Steel	1.098	.403	.083		.041	Belleville
CB20-791041	=Spring-Steel	.791	.405	.055		.041	Belleville
CB20-793031	=Spring-Steel	.793	.405	.052		.031	Belleville
CB20-865063	=Spring-Steel	.865	.405	.080		.063	Belleville
CB20-870058	=Spring-Steel	.870	.406	.112		.058	Belleville
CB20-876015	=Spring-Steel	.876	.436	.041		.015	Belleville
CB20-101005	=Spring-Steel	1.000	.440	.022		.005	Belleville
CB22-870031	=Spring-Steel	.860/.875	.442/.452	.059		.031	Belleville
CB22-870045	=Spring-Steel	.860/.875	.442/.452	.067		.045	Belleville
CB22-124095	=Spring-Steel	1.248	.465	.128		.095	Belleville
CB22-900045	=Spring-Steel	.900	.481	.071		.045	Belleville
CB22-859016	=Spring-Steel	.859	.483	.030		.016	Belleville
CB22-985060	=Spring-Steel	.985	.483	.080		.060	Belleville
CB22-110025	=Spring-Steel	1.090/1.110	.492/.501	.067		.025	Belleville
CB22-150061	=Spring-Steel	1.500	.503	.124		.061	Belleville
CB24-990035	=Spring-Steel	.985/1.000	.505/.515	.067		.035	Belleville
CB24-990043	=Spring-Steel	.985/1.000	.505/.515	.071		.043	Belleville
CB24-990050	=Spring-Steel	.985/1.000	.505/.515	.075		.050	Belleville
CB24-990073	=Spring-Steel	.985/1.000	.505/.515	.091		.073	Belleville
CB24-995070	=Spring-Steel	.990/1.000	.505/.515	.104		.070	Belleville
CB24-933015	=Spring-Steel	.933	.506	.021		.015	Belleville
CB24-125065	=Spring-Steel	1.250/1.260	.510/.520	.108/.11		.065	Belleville
CB24-100020	=Spring-Steel	.990/1.010	.510/.530	.070/.09		.020	Belleville
CB24-100050	=Spring-Steel	.990/1.010	.510/.530	.090/.12		.050	Belleville
CB24-162040	=Spring-Steel	1.610/1.640	.510/.530	.080/.10		.040	Belleville
CB24-137049	=Spring-Steel	1.376	.562	.070		.049	Belleville

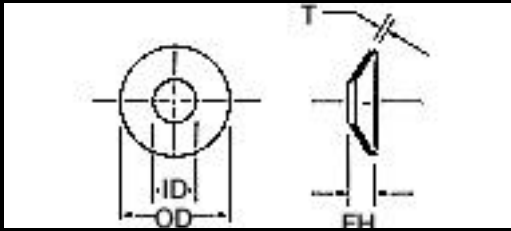

# SUPERIOR

WASHER & GASKET CORP.

 Part Number	Material	OD	ID	Free HT	Size	Thickness	
CB26-100017	=Spring-Steel	.985/1.015	.563/.593	.041/.05		.017	Belleville
CB26-112060	=Spring-Steel	1.129	.565	.115		.060	Belleville
CB26-112038	=Spring-Steel	1.115/1.125	.567/.577	.073		.038	Belleville
CB26-112056	=Spring-Steel	1.115/1.125	.567/.577	.084		.056	Belleville
CB26-942016	=Spring-Steel	.942	.573	.036		.016	Belleville
CB28-125040	=Spring-Steel	1.240/1.250	.630/.640	.082		.040	Belleville
CB28-125062	=Spring-Steel	1.240/1.250	.630/.640	.092		.062	Belleville
CB28-187086	=Spring-Steel	1.855/1.875	.630/.640	.129		.086	Belleville
CB28-237062	=Spring-Steel	2.360/2.390	.635/.655	.130/.15		.062	Belleville
CB28-140034	=Spring-Steel	1.410/1.420	.637/.642	.091/.09		.034	Belleville
CB28-138032	=Spring-Steel	1.381	.638	.145		.032	Belleville
CB29-137044	=Spring-Steel	1.355/1.375	.692/.702	.088		.044	Belleville
CB29-137067	=Spring-Steel	1.355/1.375	.692/.702	.101		.067	Belleville
CB29-125048	=Spring-Steel	1.252	.751	.093		.048	Belleville
CB29-125050	=Spring-Steel	1.250	.752	.142		.050	Belleville
CB29-125045	=Spring-Steel	1.250	.754	.100		.045	Belleville
CB30-150045	=Spring-Steel	1.480/1.500	.755/.756	.093		.045	Belleville
CB30-150060	=Spring-Steel	1.480/1.500	.755/.765	.102		.060	Belleville
CB30-150072	=Spring-Steel	1.480/1.500	.755/.765	.107		.072	Belleville
CB30-225102	=Spring-Steel	2.230/2.250	.755/.765	.153		.102	Belleville
CB30-125058	=Spring-Steel	1.250	.760	.140		.058	Belleville
CB30-149058	=Spring-Steel	1.490	.781	.119		.058	Belleville
CB32-175057	=Spring-Steel	1.730/1.750	.880/.890	.114		.057	Belleville
CB32-175085	=Spring-Steel	1.730/1.750	.880/.890	.128		.085	Belleville
CB34-200065	=Spring-Steel	1.980/2.000	1.000/1.020	.130		.065	Belleville
CB34-200097	=Spring-Steel	1.980/2.000	1.000/1.020	.145		.097	Belleville
CB34-300135	=Spring-Steel	2.980/3.000	1.000/1.020	.202		.135	Belleville
CB34-199095	=Spring-Steel	1.995	1.062	.156		.095	Belleville
CB36-225073	=Spring-Steel	2.230/2.250	1.125/1.145	.148		.073	Belleville
CB36-225111	=Spring-Steel	2.230/2.250	1.125/1.145	.165		.111	Belleville

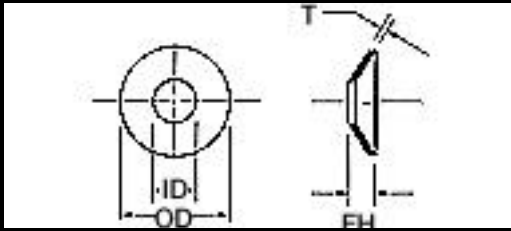

# SUPERIOR

WASHER & GASKET CORP.

Part Number	Material	OD	ID	Free HT	Size	Thickness	
CB38-250080	=Spring-Steel	2.480/2.500	1.250/1.270	.160		.080	Belleville
CB38-250120	=Spring-Steel	2.480/2.500	1.250/1.270	.180		.120	Belleville
CB38-375168	=Spring-Steel	3.730/3.750	1.250/1.270	.251		.168	Belleville
CB40-275087	=Spring-Steel	2.730/2.750	1.375/1.395	.173		.087	Belleville
CB40-275132	=Spring-Steel	2.730/2.750	1.375/1.395	.196		.132	Belleville
CB42-300093	=Spring-Steel	2.980/3.000	1.500/1.520	.189		.093	Belleville
CB42-300143	=Spring-Steel	2.980/3.000	1.500/1.520	.213		.143	Belleville